
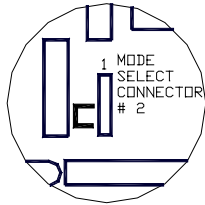


### STEREO 2-WAY MODE

LOW 1 = LOW OUTPUT  
 HIGH 1 = HIGH OUTPUT  
 FREQ 1 = HIGH/LOW XOVER PT  
 CHANNEL 1,2 IDENTICAL

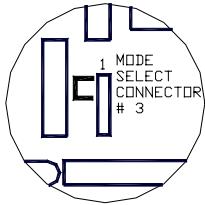

### MONO 3-WAY MODE

LOW 1 = NOT USED  
 HIGH 1 = HIGH OUTPUT  
 FREQ 1 = HIGH/MID XOVER PT  
 LOW 2 = LOW OUTPUT  
 HIGH 2 = MID OUTPUT  
 FREQ 2 = MID/LOW XOVER PT