
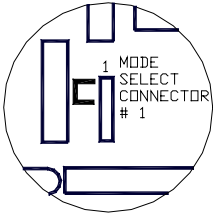
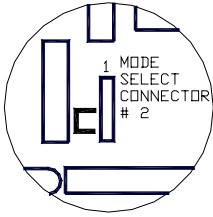





QUAD 2-WAY MODE

LOW 1 = LOW OUTPUT
 HIGH 1 = HIGH OUTPUT
 FREQ 1 = HIGH/LOW XOVER PT
 CHANNEL 1,2,3,4 IDENTICAL

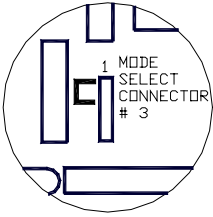




STEREO 3-WAY MODE

LOW 1 = NOT USED
 HIGH 1 = HIGH OUTPUT
 FREQ 1 = HIGH/MID XOVER PT
 LOW 2 = LOW OUTPUT
 HIGH 2 = MID OUTPUT
 FREQ 2 = MID/LOW XOVER PT
 CH. 1 & 3, AND CH. 2 & 4 IDENTICAL

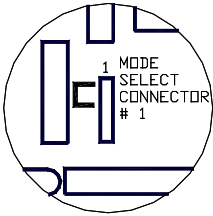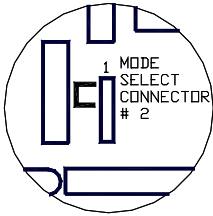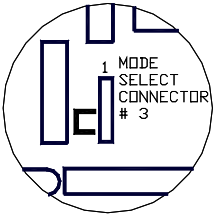

MONO 4-WAY MODE

LOW 1 = NOT USED
 HIGH 1 = HIGH OUTPUT
 FREQ 1 = HIGH/MID XOVER PT
 LOW 2 = NOT USED
 HIGH 2 = MID OUTPUT
 FREQ 2 = MID/LOW XOVER PT
 LOW 3 = SUB OUTPUT
 HIGH 3 = LOW OUTPUT
 FREQ 3 = LOW/SUB XOVER PT
 CH. 4 NOT USED, MAY BE USED AS A 2-WAY

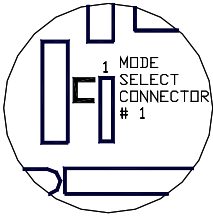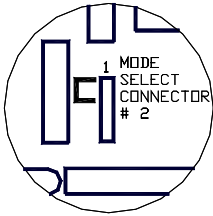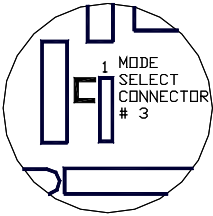

MONO 5-WAY MODE

LOW 1 = NOT USED
 HIGH 1 = HIGH OUTPUT
 FREQ 1 = HIGH/HIGH-MID XOVER PT
 LOW 2 = NOT USED
 HIGH 2 = HIGH-MID OUTPUT
 FREQ 2 = HIGH-MID/LOW-MID XOVER PT
 LOW 3 = NOT USED
 HIGH 3 = LOW-MID OUTPUT
 FREQ 3 = LOW-MID/LOW XOVER PT
 LOW 4 = SUB OUTPUT
 HIGH 4 = LOW OUTPUT
 FREQ 4 = LOW/SUB XOVER PT