



### QUAD 2-WAY MODE

LOW 1 = LOW OUTPUT  
 HIGH 1 = HIGH OUTPUT  
 FREQ 1 = HIGH/LOW XOVER PT  
 CHANNEL 1,2,3,4 IDENTICAL

### STEREO 3-WAY MODE

LOW 1 = NOT USED  
 HIGH 1 = HIGH OUTPUT  
 FREQ 1 = HIGH/MID XOVER PT  
 LOW 2 = LOW OUTPUT  
 HIGH 2 = MID OUTPUT  
 FREQ 2 = MID/LOW XOVER PT  
 CH. 1 & 3, AND CH. 2 & 4 IDENTICAL

### MONO 4-WAY MODE

LOW 1 = NOT USED  
 HIGH 1 = HIGH OUTPUT  
 FREQ 1 = HIGH/MID XOVER PT  
 LOW 2 = NOT USED  
 HIGH 2 = MID OUTPUT  
 FREQ 2 = MID/LOW XOVER PT  
 LOW 3 = SUB OUTPUT  
 HIGH 3 = LOW OUTPUT  
 FREQ 3 = LOW/SUB XOVER PT  
 CH. 4 NOT USED, MAY BE USED AS A 2-WAY

### MONO 5-WAY MODE

LOW 1 = NOT USED  
 HIGH 1 = HIGH OUTPUT  
 FREQ 1 = HIGH/HIGH-MID XOVER PT  
 LOW 2 = NOT USED  
 HIGH 2 = HIGH-MID OUTPUT  
 FREQ 2 = HIGH-MID/LOW-MID XOVER PT  
 LOW 3 = NOT USED  
 HIGH 3 = LOW-MID OUTPUT  
 FREQ 3 = LOW-MID/LOW XOVER PT  
 LOW 4 = SUB OUTPUT  
 HIGH 4 = LOW OUTPUT  
 FREQ 4 = LOW/SUB XOVER PT