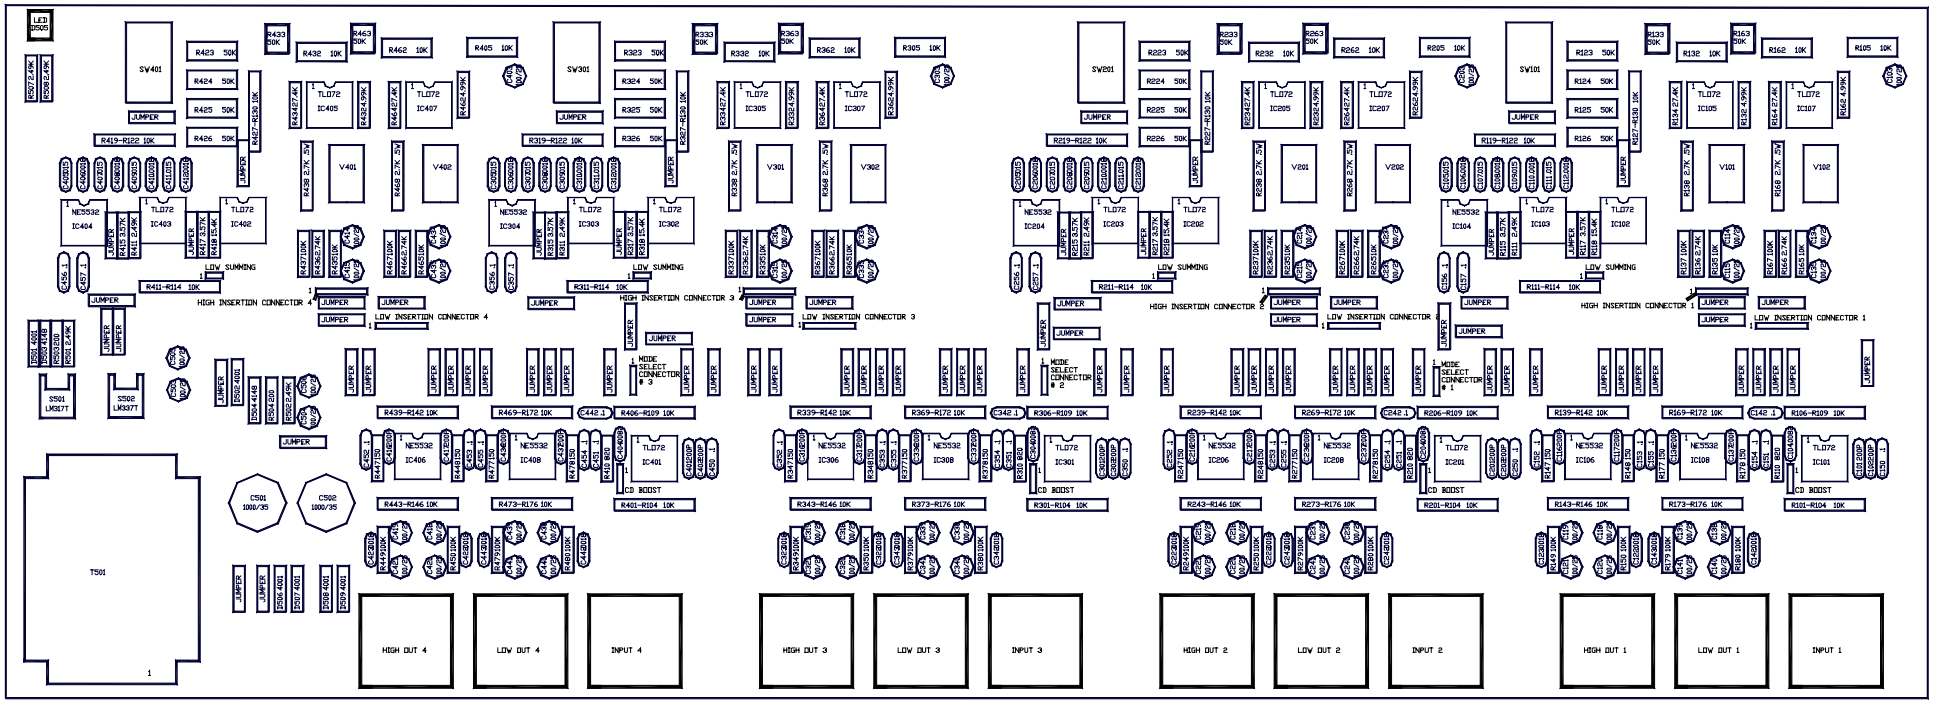
LED D505
SV401
SW301
SW201
SW101
JUMPER
R419–R122 10K
R219–R122 10K
R119–R122 10K
R311–R114 10K
R211–R114 10K
R111–R114 10K
LOW SUMMING
HIGH INSERTION CONNECTOR 4
LOW INSERTION CONNECTOR 4
HIGH INSERTION CONNECTOR 3
LOW INSERTION CONNECTOR 3
HIGH INSERTION CONNECTOR 2
LOW INSERTION CONNECTOR 2
HIGH INSERTION CONNECTOR 1
LOW INSERTION CONNECTOR 1
MODE SELECT CONNECTOR # 3
MODE SELECT CONNECTOR # 2
MODE SELECT CONNECTOR # 1
CD BOOST
T501
HIGH OUT 4
LOW OUT 4
INPUT 4
HIGH OUT 3
LOW OUT 3
INPUT 3
HIGH OUT 2
LOW OUT 2
INPUT 2
HIGH OUT 1
LOW OUT 1
INPUT 1